
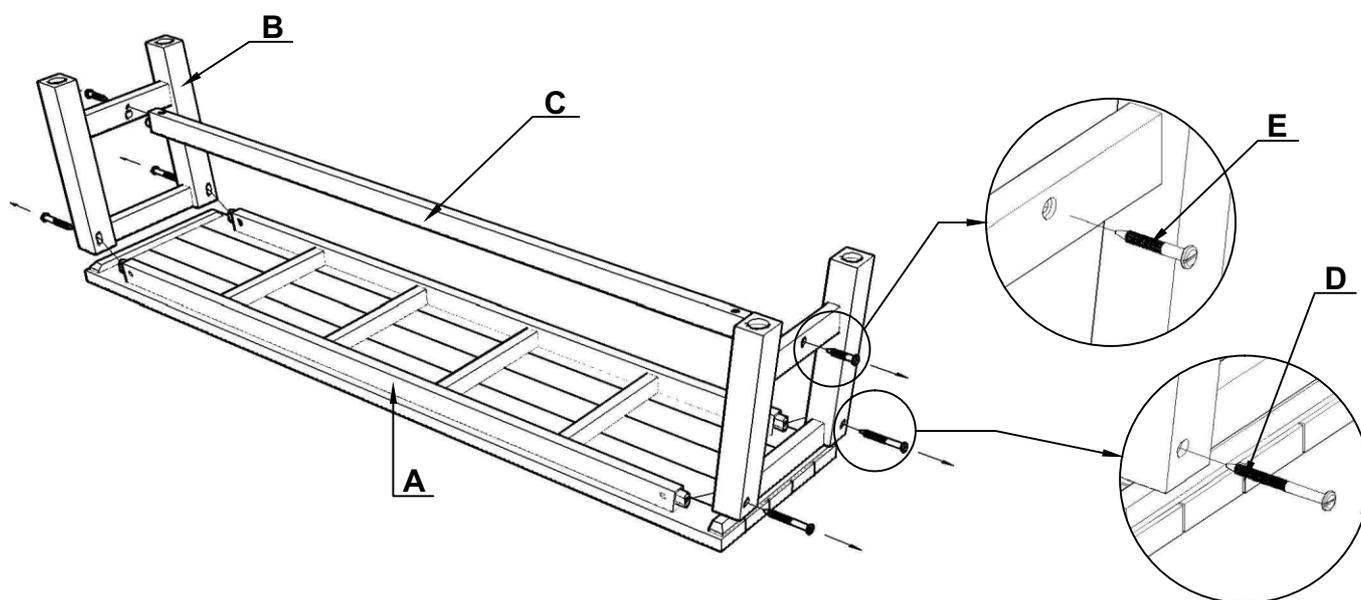
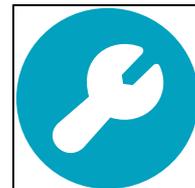
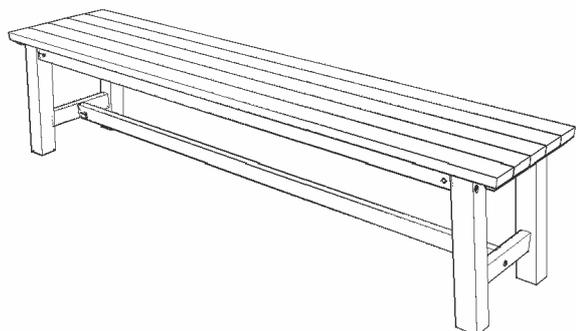
 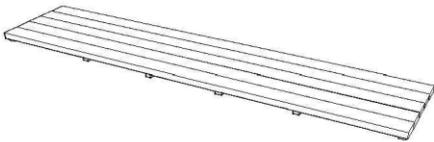
 


Disassembly instruction



| | | |
|---|---|---|
| A |  | 1 |
| | Teak wood | |
| B |  | 2 |
| | Teak wood | |
| C |  | 1 |
| | Teak wood | |
| D |  | 4 |
| | Brass bolt | |
| E |  | 2 |
| | Brass bolt | |

STEP 1

Turn the bench upside down

STEP 2

Remove the 2 short bolts on the leg bar and 4 long bolts on the bench legs

STEP 3

Remove the bench legs and leg bar
